

Arkansas Department of Transportation

OpenRoads / OpenBridge Consultant Configuration

Configuration Version: Beta 2.1
Configuration Date: August 10, 2023
ORD Development Version: 10.10.21.04 - 2021 Release 2 (21R2)

Installation Notes

The ARDOT ORD/OBD Consultant Configuration has been developed to provide flexible implementation by our consulting partners. The configuration can be installed directly on top of the standard Bentley installation structure, fully separate standalone local and networked standalone.

Standard Installation

For inclusion within a standard installation (locally at C:\Program Data\Bentley\ or networked location defined with custom configuration variables) simply copy the Organization Civil and WorkSpace content from the ARDOT-ORD_10-10\Configuration\ folder to the defined locations for your installation. This may require pulling the WorkSet content to a separate location depending on the custom configuration.

Local Standalone

For a local standalone usage, copy the ARDOT-ORD_10-10 folder into a C:\WorkAHTD\Standards\. For use in this manner the ARDOT configuration can be launched from the ...\\ARDOT-ORD_10-10\\Startup\\Local-WorkAHTD\\ARDOT ORD - WorkAHTD shortcut. (This may be copied to another convenient location.) This install can be place in other locations but the shortcut and .CFG files in the Local-WorkAHTD folder will need to be updated to reflect those changes.

Network Standalone

For a networked standalone configuration it is presumed that the configuration and project content will be stored in different locations. The configuration content in the ARDOT-ORD_10-10 folder to the desired location for these files. This location is referenced as ARDOT_ORD. A project folder can be created in a desired location and is referenced as ARDOT_PROJECTS. These paths will need to be added to the ARDOT_Settings.cfg file. The location of the start up folder will need updated in the shortcut as well as the ARDOT_Icon_ORD.cfg file.